



QUICK SETUP GUIDE

Speaker Main Features

Wi-Fi connection is recommended for this speaker.

Provides a wide range of sound sources, Internet radio available, and supports group play with multiple connections or stereo sound feature.



Features	 Wi-Fi	 Bluetooth®
Multiroom feature	Connect multiple devices at once.	One device connection
Music service	Variety of music services available with the Samsung Multiroom App. - Sound source service - Internet radio (TuneIn)	App installation per music service required



NOTE

- ✓ Bluetooth Setup, please refer to page 11.

Checking the Components

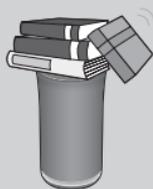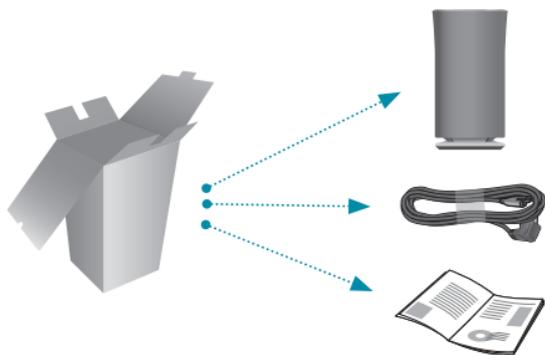

Do not place any items on top of or sit on the main unit.

Getting Started

1. Follow the installation steps in this user manual.
2. Please download **Samsung Multiroom** app on your smart device.

Installation

1. Make sure your smart device (Smart Phone, Tablet, PAD, etc) is connected to your Wi-Fi network.



NOTE

- ✓ All the devices need to connect to the same network.




Smart device




Router

2. On your smart device, download and install the **Samsung Multiroom** app.

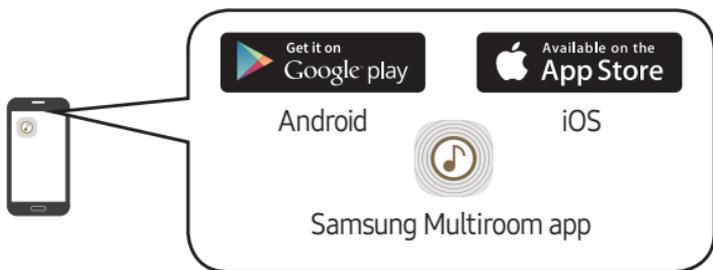

3. Connect your speaker to power.

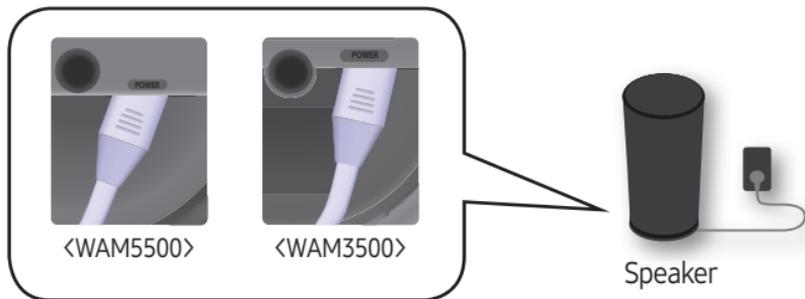

The power cord plug will be connected at an angle.

Installation

4. Launch the **Samsung Multiroom** app on your smart device, and then follow the instruction on the screen to complete setup.
 - Play music after speaker setup is complete.



Welcome Screen


If Auto Set-up fails, follow the on-screen instructions.



NOTE

- ✓ If speaker setup continually fails, Press and hold the volume (+, -) buttons on top of the speaker simultaneously for five seconds to reset the speaker. Next, restart the app and follow the displayed instructions to configure the speaker again.

Speaker Top

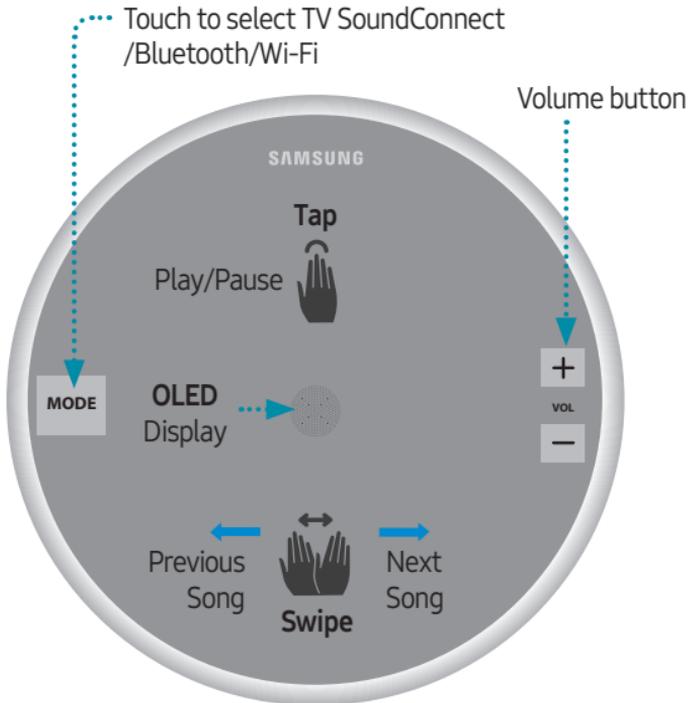

NOTES

- ✓ Tap/Swipe : Whole area is available except **MODE**, Volume (-,+) key area on the TOP.
- ✓ The speaker will enter standby mode to reduce energy consumption after **15 minutes** of idle time.

Speaker Bottom

SPK ADD/Wi-Fi SETUP

POWER

Connect the power cord plug to your speaker as shown below.
It will connect at an angle.



<WAM5500>



<WAM3500>

Shown:
WAM5500


SPK ADD/Wi-Fi SETUP SERVICE1 SERVICE2

POWER

Notch for Power Cable

- WAM5500
SERVICE1/SERVICE2 Jack : For service only.
- WAM3500
SERVICE Jack : For service only.

Using the Samsung Multiroom App (on Main Screen)

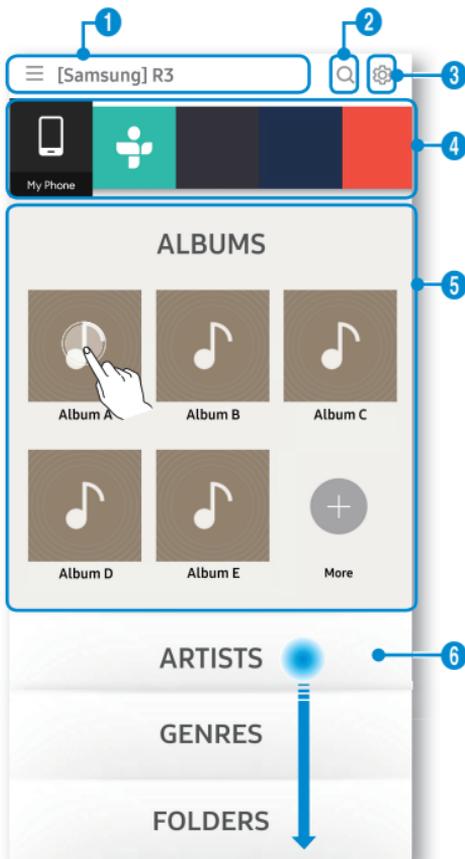

- 1 View the full list of connected speakers.
- 2 Enter a keyword to search for the music desired.
- 3 Access the settings menu.
- 4 Select a source of music and play the music you want. Scroll left or right to view different sources of music.
- 5 A different screen is displayed according to the music source selected.
- 6 Different categories of music are listed below the bar. Scroll down to select your favourite categories of music.

NOTES




- ✓ Some of app image might be different. Please refer to Web Manual for the detail information.
- ✓ Sign-up or log-in may be required to access some streaming services.
- ✓ Some TuneIn radio channels may be restricted depending on their site policies.
- ✓ Supported streaming services are provided by third parties and may be terminated at any time.

Connecting Additional Speakers

You can add additional speakers

Use an app to add speakers to the network.

1. Connect the new speaker to an electrical outlet.
2. On the main screen, touch  at the top left to display a list of speakers.
3. Touch **More**.
4. Touch **Add New Speaker** in the app, and then follow the instructions on the app screen.


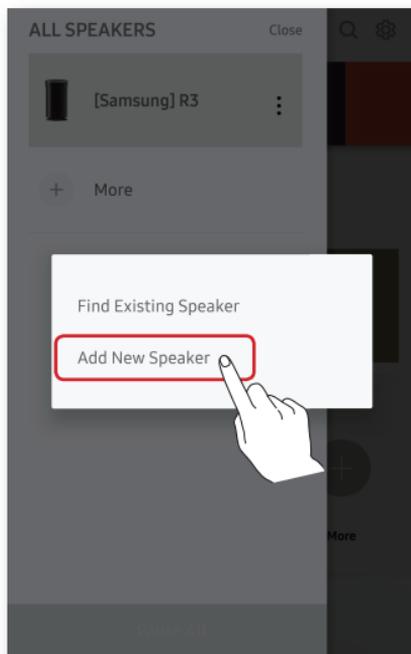
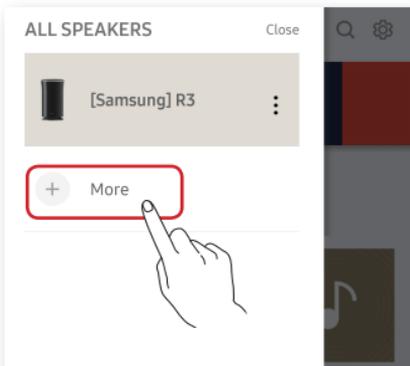
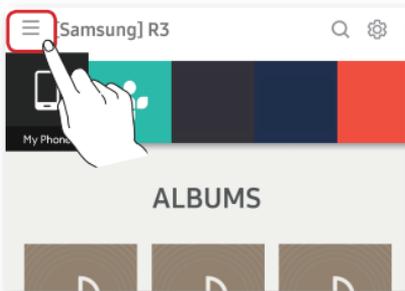


Using Multiple Speakers

Setting up a group

Group multiple speakers, connected over the same network, to play the same music via the speakers.

1. On the main screen, touch  at the top left to display a list of speakers.
2. Touch  next to the speaker name.
3. Touch **Group**. If you have more than two connected speakers, select the speakers you want to set up as a group, and then select **Done**.

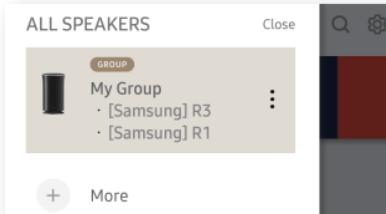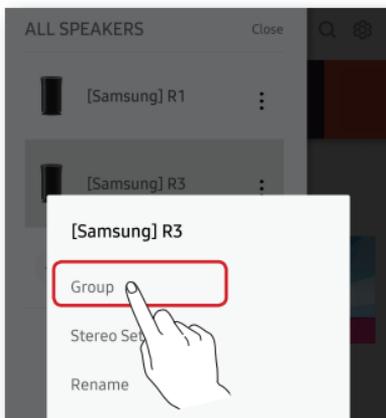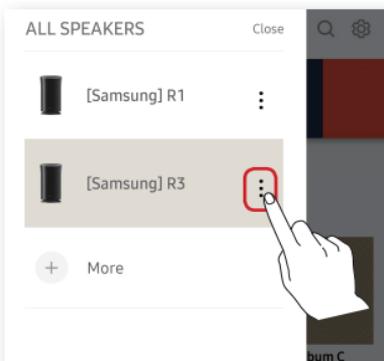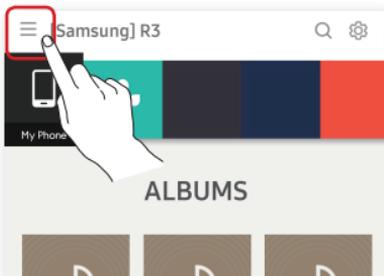

NOTES

- ✓ If two speakers are available, touch **Group** to automatically group the speakers.
- ✓ You cannot use **Group** with Bluetooth or a TV SoundConnect connection.


Using Multiple Speakers

Setting up Stereo Mode

✓ If connecting to a Samsung Smart TV over Wi-Fi, use multiple speakers to configure a surround sound system. Refer to “Connecting to a Samsung Smart TV over Wi-Fi” for details.

Use multiple speakers to enjoy stereo sound.

1. On the main screen, touch  at the top left to display a list of speakers.
2. Touch  next to the speaker name.
3. Touch **Stereo Setup**.
4. Touch and hold a speaker, drag and drop it to a desired location, and then select **Done**.

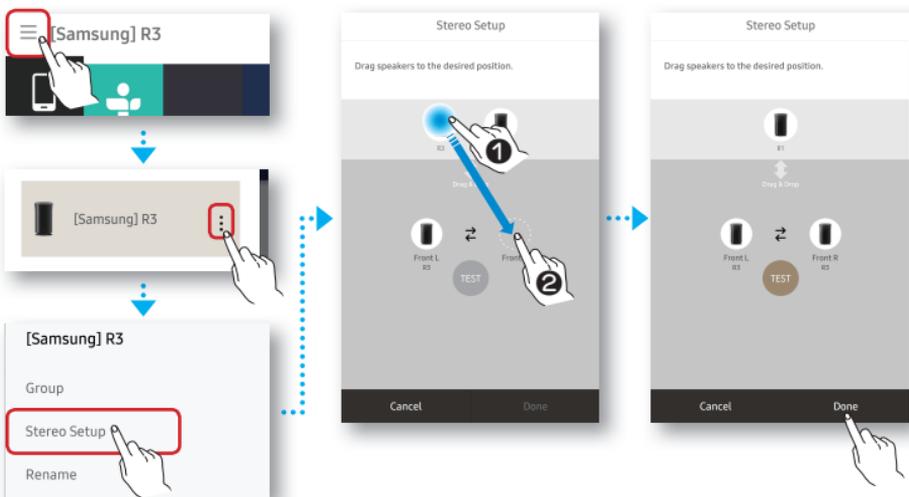

NOTES

- ✓ If two speakers are connected, touch **Stereo Setup** to enable stereo sound mode.
- ✓ Speaker testing and volume adjustment are optional.
- ✓ You cannot use **Stereo Setup** with Bluetooth or a TV SoundConnect connection.

Using Bluetooth®

1. Touch the **MODE** button on the TOP of your speaker one or more times until you hear “Bluetooth is ready.”
2. Enable Bluetooth on your smart phone, and then select **[Samsung] R5** or **[Samsung] R3** from the Bluetooth list.



NOTE

- ✓ Without connection with **Samsung Multiroom** app, you might see “**Samsung Wireless Audio**” on your Bluetooth list.

3. Use any music app on your device to play music on your speaker.

NOTE

- ✓ In **Bluetooth** mode, the Play/Pause/Next/Prev functions are available in Bluetooth devices supporting AVRCP.

Connecting to a TV via TV SoundConnect (Bluetooth)

TV SoundConnect allows an easy wireless connection between a Samsung TV and your speaker so you can enjoy listening to your TV's sound through the speaker.

1. Touch the **MODE** button one or more times until you hear "TV SoundConnect is ready."

NOTE

- ✓ TV SoundConnect can be used to connect a single speaker to a TV.
(to connect multiple speakers to a TV, refer to "Connecting to a Samsung Smart TV over Wi-Fi").

2. Press and hold **MODE** button for 5 seconds to initialise TV SoundConnect Mode.
3. A pop-up appears on the TV asking you to approve the connection. Approve to continue.

NOTES

- ✓ Once connection completed, skip above step 2 and 3 when you connect the TV again.
- ✓ To connect a new TV, follow above all 3 steps.
- ✓ The TV SoundConnect (SoundShare) feature is available on several Samsung TV models released after 2012.

Connecting to a Samsung Smart TV over Wi-Fi

What is the Wi-Fi surround sound connection?

If your Samsung TV supports the Wi-Fi mode, connect the TV and audio devices on the same Wi-Fi network. You can enjoy sound experience from the surround sound system.

Playing TV sound using the
Soundbar and speakers



Playing TV sound using speakers
only (up to five speakers can be
connected)



Checklist before Connection

※ Check information for your TV model.

For connection to a TV over Wi-Fi, only Samsung Smart TVs, released after 2014, are compatible. (See the User Manual provided with your TV.)

When using a smart TV manufactured by other than Samsung,

- Use a wired connection to connect between your TV and Samsung Soundbar that supports the multiroom feature. Then use the Multiroom app to set up your surround sound system. (Refer to the Soundbar user manual at the Samsung website.)

Connecting to a Samsung Smart TV over Wi-Fi

1. Check to make sure that the Soundbar and audio device are connected to a (Wi-Fi) network.



NOTE

- ✓ Download the **Samsung Multiroom** app to your smart device, then follow the instructions in the app to connect the speakers and/or Soundbar to the (Wi-Fi) network.
2. Check to make sure that the TV is connected to the network.
 - How to check : Menu → Network → Network Status
 3. Check to make sure that the TV, Soundbar and speakers are connected to the same network.

Connecting to a Samsung Smart TV released in 2016

■ Connecting a single speaker or Soundbar

From the menus, select **Sound Output**.

Home Menu → Settings (⚙️) → Sound → Sound Output → Model name(Wi-Fi)


■ Connecting multiple speakers or connecting a single speaker along with the Soundbar

1. On the TV menu, select **Wireless Speaker Manager**.

Menu → Sound → Expert Settings → Wireless Speaker Manager

Connecting to a Samsung Smart TV over Wi-Fi

2. Select **Multiroom Link Type**.

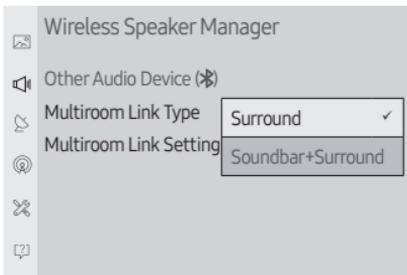


- **Surround :**
Set up with 2 to 5 speakers
- **Soundbar+Surround :**
Set up with one Soundbar and two speakers

NOTE

- ✓ The surround sound system is not available with a combination of one Soundbar and one speaker.

3. Select **Multiroom Link Settings**. Select a speaker for each channel and select **Save** to complete configuration.

• **Surround**

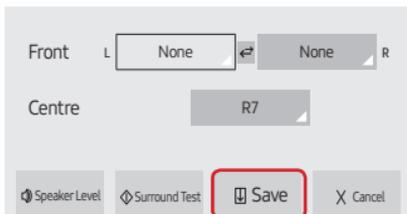

• **Soundbar+Surround**





- ✓ If a connection cannot be established, see “Checklist before Connection” on pages 13 and 14.

Connecting to a Samsung Smart TV over Wi-Fi

Connecting to a Samsung Smart TV released in 2015

■ Connecting a single speaker or Soundbar

1. On the TV menu, select **Speaker List**.
Menu → Sound → Speaker List
2. Select a connected speaker from the list of speakers.

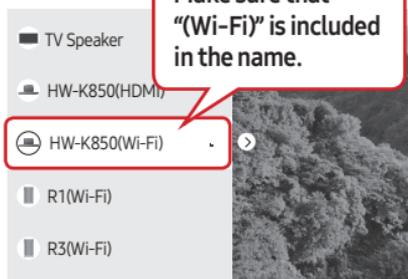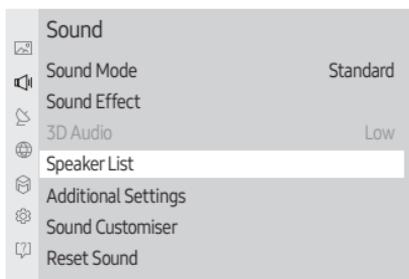

! IMPORTANT

- ✓ Soundbars are indicated by the 'Model name(Wi-Fi)'.

■ Connecting multiple speakers or connecting a single speaker along with the Soundbar

1. Follow the instructions under "Connecting a single speaker or Soundbar" to connect a speaker.


! IMPORTANT

- ✓ To configure the surround sound system aligned with a Soundbar, select a **Soundbar first**.

Connecting to a Samsung Smart TV over Wi-Fi


2. With the speaker selected, press the right directional key on the remote control. Select a speaker for each channel and select **Save** to complete configuration.

Connecting only a speaker

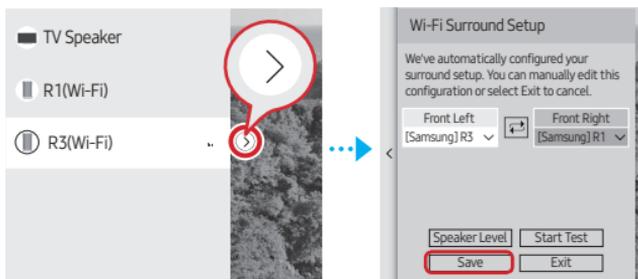

Connecting a speaker along with the Soundbar

- ✓ The surround sound system is not available with a combination of one Soundbar and one speaker.

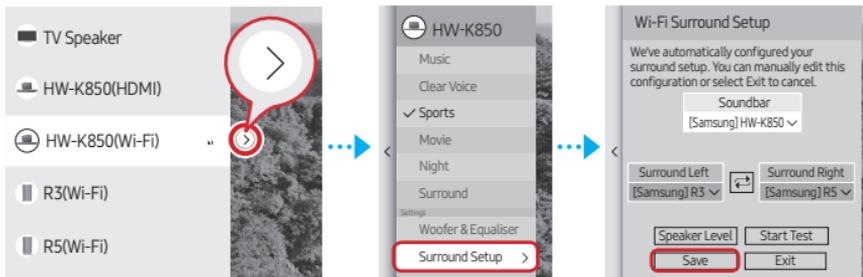



- ✓ If a connection cannot be established, see “Checklist before Connection” on pages 13 and 14.

Connecting to a Samsung Smart TV over Wi-Fi


Connecting to a Samsung Smart TV released in 2014

1. From the menus, select **Multiroom Link - Settings**.

Menu → Sound → Speaker Settings → Multiroom Link - Settings

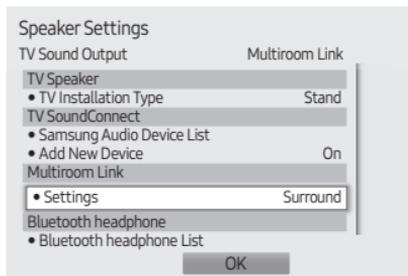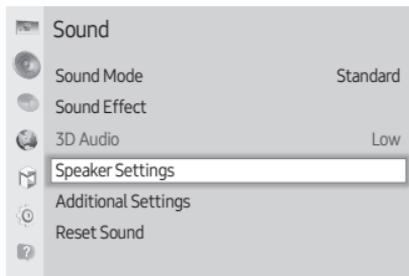

2. Select the **Multiroom Link** type.

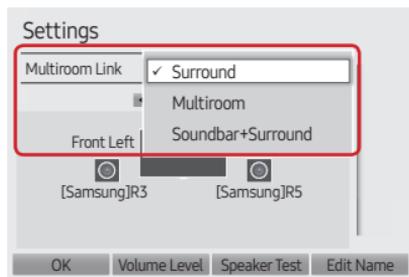

- **Surround :**

Set up with one to five speakers

- **Soundbar+Surround :**


Set up with one Soundbar, or with one Soundbar and two speakers





- ✓ The surround sound system is not available with a combination of one Soundbar and one speaker.

Connecting to a Samsung Smart TV over Wi-Fi

3. Select the number of speakers to connect.
e.g., one speaker → 1CH, two speakers → 2CH

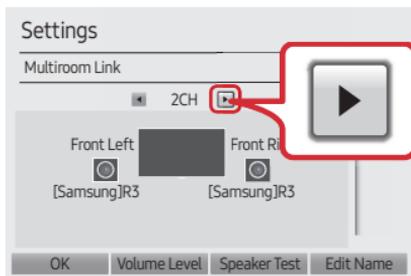

4. Select the speaker in the position you want and select **OK**.

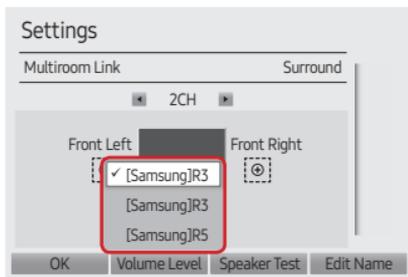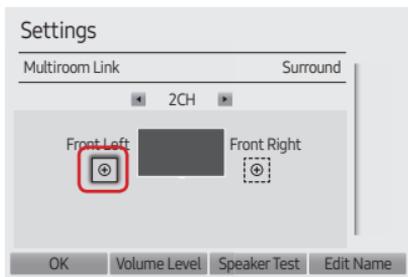

5. Set TV sound output to **Multiroom Link**.

✓ If a connection cannot be established, see “Checklist before Connection” on pages 13 and 14.

	Area	Contact Centre ☎	Web Site
S.E.A	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
	AUSTRALIA	1300 362 603	www.samsung.com/au/support
	NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
	VIETNAM	1800 588 889	www.samsung.com/vn/support
	THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
	MYANMAR	+95-1-2399-888	www.samsung.com/th/support
	MALAYSIA	1800-88-9999 603-77137477 (Overseas contact)	www.samsung.com/my/support
	INDONESIA	021-56997777 08001128888	www.samsung.com/id/support
	PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-422-2111 [Standard Landline]	www.samsung.com/ph/support
	TAIWAN	0800-329999	www.samsung.com/tw/support
	JAPAN	0120-363-905	www.samsung.com/jp/support



AH68-02950L-00