



Acer Chromebook Tab 10

USER'S MANUAL

© 2018. All Rights Reserved.
Acer Chromebook Tab 10
Covers: D651N
This revision: March 2018
Regulatory Model Number: N18Q1

Sign up for an Acer ID and enjoy great benefits

1. Ensure you are connected to the Internet.
2. Open **www.acer.com** and select your country.
3. Select **Support > REGISTER A PRODUCT**.
4. Sign up for an Acer ID or sign in if you already have an Acer ID.

Register your Acer product

After we receive your product registration, you will be sent a confirmation email with important data. Keep this email in a safe place.

Manage your registered products

Once you have completed the registration process, you can log onto **account.acer.com** using your Acer ID and password to see and manage all your registered products.



Note

It may take a few days for your information to be updated to the database.



Important

This manual contains proprietary information that is protected by copyright laws. The information contained in this manual is subject to change without notice. Images provided herein are for reference only and may contain information or features that do not apply to your computer. Acer Group shall not be liable for technical or editorial errors or omissions contained in this manual.

Model number: _____

Serial number: _____

Date of purchase: _____

Place of purchase: _____

TABLE OF CONTENTS

Register your Acer product	2	Composing an email	19
Manage your registered products	2	YouTube	19
Getting started	4	Playing video or audio files	19
Turn on your Chromebook Tab	4	Other Supported File Types.....	20
Select your language settings	4	Chrome OS tips and tricks	21
Connect to a network.....	4	Documents.....	21
Accept the Terms of Service.....	4	How to create documents	21
First-time sign-in.....	4	Finding your documents.....	21
Create a new Google™ Account	4	How to share documents with other users	22
Browse as a guest	4	How to start a video chat	22
Sign in to your Google Account	5	How to listen to music.....	23
Your Acer Chromebook Tab tour	6	How to watch videos, TV, or movies.....	23
Front view.....	6	Working with Microsoft Office (Word,	
Rear view.....	7	Excel, and Powerpoint) documents	24
Top view	8	Open and edit Microsoft Office files using	
Left view	9	Google's office compatibility mode	24
Base view	10	Convert Microsoft Office files to Google	
USB Type-C information	10	Drive formats.....	24
The Chrome OS Desktop	11	Export Google Drive documents as	
Window controls	11	Microsoft Office files.....	24
Shelf	12	Opening Microsoft Office files using	
Launcher.....	12	Microsoft's Office Online apps from the	
Pinned apps.....	13	Chrome Web Store or Google Play Store.	25
Back button.....	13	How to use your Chromebook Tab when	
Overview button	13	there's no internet.....	25
Stylus	13	Gmail Offline	26
Status area.....	14	Google Drive.....	26
Apps & extensions	15	Settings	28
Managing apps	15	Changing the language settings	28
Installing apps from Chrome Web Store ..	15	Changing the clock settings.....	29
Installing apps from Google Play Store	16	Customizing appearance	29
Removing apps from Chrome OS.....	16	Customizing the wallpaper.....	29
Pin an app to the shelf	16	Customizing the theme	29
Unpin an app from the shelf.....	16	Setting up a printer	30
Google Drive	17	Updating Chrome OS	30
Difference between Drive and Files apps .	17	Automatic update	30
Creating a new document.....	17	Manual update	30
Sync files from Downloads to Google		Resetting your Chromebook Tab.....	31
Drive.....	18	Help	32
Enable offline access to Google Drive files	18	Online and offline help	32
Gmail	19		

GETTING STARTED

Turn on your Chromebook Tab

On the Chromebook Tab, press and hold the power button. A "Welcome" screen will appear when the Chromebook Tab first boots up.

Select your language settings

Use the "Language" drop-down list to choose your default language setting. If there is more than one way to type in your language, you may be prompted to select a keyboard input method as well.

Connect to a network

Select a network from the "Connect to network" list to connect to the Internet. If network access is protected, you will need an access password to connect to it.

Accept the Terms of Service

Once connected to a network, accept the Terms of Service. Your Chromebook Tab will then download any available system updates, so you automatically get the latest Chrome OS features.

First-time sign-in

Create a new Google™ Account


You can create a new Google Account if you don't already have one. Select **Create a Google Account** to set up a new account. A Google Account gives you access to useful web services developed by Google, such as Gmail, Google Drive, and Google Calendar.

Browse as a guest

You can also use the Chromebook Tab without a Google Account by selecting **Browse as a Guest**.

Sign in to your Google Account

If you already have a Google Account, enter your username and password in the sign-in box that appears and select the **Sign in** button.

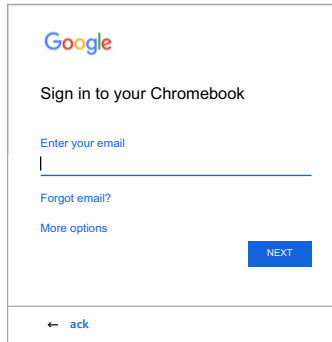

The screenshot shows the Google sign-in interface for a Chromebook. At the top is the Google logo. Below it is the text "Sign in to your Chromebook". There is an input field with the placeholder text "Enter your email" and a blue underline. Below the input field are two links: "Forgot email?" and "More options". A blue "NEXT" button is positioned to the right of the input field. At the bottom left of the form is a back arrow and the text "ack".



 
Important

Sign in with your primary Google Account. This account will be set as the owner and is the only account that will be able to change certain Chrome settings.

YOUR ACER CHROMEBOOK TAB TOUR


Now that you are done setting it up, let us show you around your new Acer Chromebook Tab.

Front view

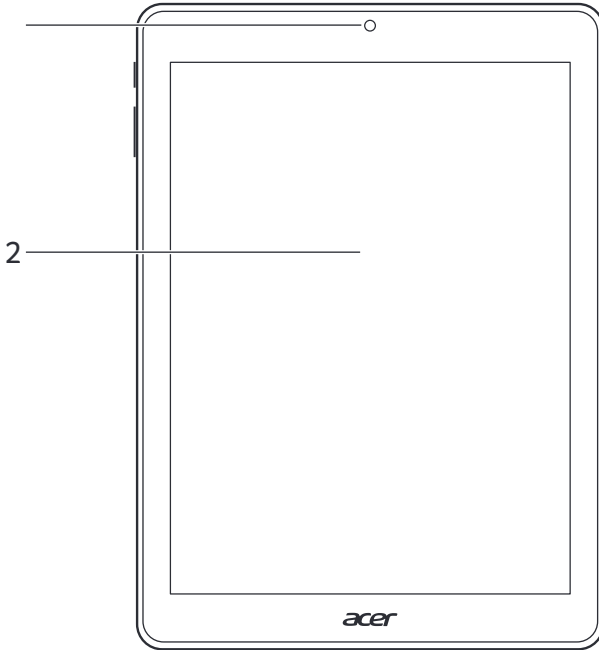


#	Item	Description
1	Front camera	Camera for video communication or taking photos. <i>A light next to the camera indicates that the camera is active.</i>
2	Touchscreen	For viewing content from your device or entering data.

 Rear view

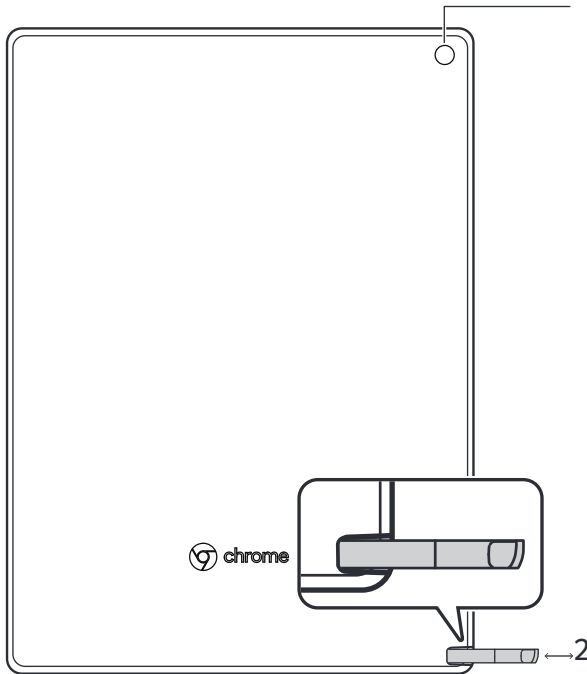


#	Item	Description
1	Rear camera	Camera for video communication or taking photos.
2	Stylus pen	Remove the pen from the slot and perform touch actions on the screen. <i>To disengage the stylus from the tablet refer to Stylus on page 13.</i>

 Top view




#	Item	Description
1	Speakers	Deliver stereo audio output.
2	Microphone	Receives audio for video chats and internet calls.
3	Headset/speaker jack	Connects to audio devices (e.g., speakers, headphones), or a headset with microphone.

 Left view



#	Item	Description
1	Stylus slot	Holds the stylus pen.
2	microSD card slot	Insert a microSD card into the slot.
3	Volume control key	Adjusts the volume on your tablet.
4	Battery indicator	Indicates the tablet's battery status. Charging: The light shows amber when the battery is charging. Fully charged: The light shows green when in AC mode.
5	Power button	Press to turn the tablet on or off.

 Base view



#	Item	Description
1	Speakers	Deliver stereo audio output.
2	USB Type-C port with DC-in	Connects to the provided USB Type-C power adapter and to USB devices with a USB Type-C connector. Supports DisplayPort™ over USB-C™.

 
USB Type-C information

- USB 3.1 Gen 1 with transfer speeds up to 5 Gbps.
- Supports DisplayPort™ audio/video output.
- Delivers up to 3 A at 5 V DC for USB charging.
- DC-in: requires power adapter or power source providing 45 W at 5/9/15/20 V.
For optimal performance, please use a certified Acer power adapter or USB Power Delivery device.

THE CHROME OS DESKTOP



Window controls

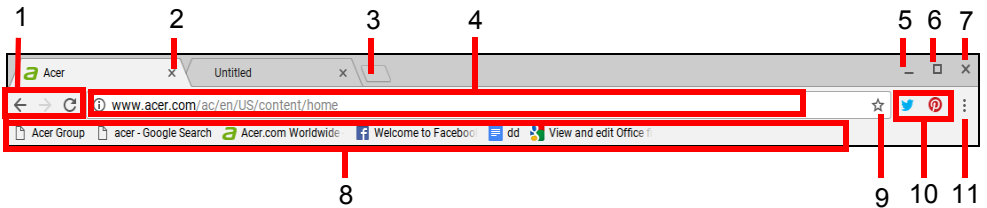

Number	Description
1	Goes <i>Backward</i> ← and <i>Forward</i> → in the current web browsing sessions's history (closing and reopening the Chrome browser begins a new session). Select <i>Reload</i> ↻ to refresh the current webpage.
2	Closes a tab.
3	Opens a new tab.
4	Type a web address or perform an internet search in this search box (also known as the "omnibox").
5	Minimizes the window into the desktop shelf.

Number	Description
6	Maximizes the window to take up the entire screen. Click again to return window to previous position. Also, select and hold to display a left ◀ and right ▶ arrow next to the icon. These neatly align the window to take up half the left side of the screen or the right side, respectively.
7	Closes the entire window (tabs and all).
8	Bookmark (save) webpage links to this quick-access area called the "bookmarks bar".
9	Select to bookmark (save) a link to the current webpage.
10	Select to use any enabled extensions you have installed in Chrome from this extension list.
11	Select to customize and control Google Chrome.

Shelf



Note

Specifications vary. Some icons may not be applicable to your Chromebook Tab.

Launcher

Select the **Launcher** icon to display the launcher page. This is the fastest way to search for something. Simply start typing to search the internet, your bookmarks, any files you have stored in your Google Drive, and items in the Web Store.

The Launcher page is also the place to access all your apps. Below the search box are your frequently-used apps. Simply select one to open it.

Pinned apps

See [Pin an app to the shelf on page 16](#) and [Unpin an app from the shelf on page 16](#) for more information.

Back button


The **back** button enables you to exit fullscreen apps and quit app menus.






Overview button

Tap the **overview** button to enable the split screen functioning.

Stylus











To remove the stylus pen, pull the pen from the slot and perform touch actions on the screen. To store the pen, push it back into the slot until you hear an audible click.

When you remove the stylus pen, the **Stylus tools** pop-up menu appears. You can also tap the **Stylus**  icon located to the left of notification icon to open the stylus tools. The dedicated stylus tools have a specific function.

Icon	Function	Description
	Capture region	Takes a partial screenshot.
	Capture screen	Takes a full page screenshot.
	Create note	Opens Google Keep and creates a new note.
	Laser pointer	Use the pen as a laser pointing device. Touches the screen with red laser dot.
	Magnifying glass	Magnifies a selected area.

Status area

The Status area enables you to see vital computer information at a glance, such as the time, Wi-Fi signal strength, and battery life. Tap the **Status** area to display a box with more options.

Icon	Description	Icon	Description
	Chrome OS help		Shut down
	Lock screen		Settings
	Volume control		Wireless network connection
	Bluetooth status		Battery status
	Brightness		Auto rotate

APPS & EXTENSIONS

You can enhance your Chromebook Tab with extra web applications (Chrome apps, for short), features for the browser (also known as extensions) and apps designed for Android™ (Play Store apps). Chrome apps work like regular software programs for desktop computers, except they run entirely on the web. Extensions provide custom features and functionality for the Chrome browser. Android apps, designed for Android mobile devices are supported on Chromebooks. You can find Chrome apps and extensions through the Web Store, and Android apps using the Google Play Store.

Managing apps



Note

Certain apps and browser extensions may not be available in all countries and regions. The contents and design of the Web Store may vary by region. Updates may add new categories or change how to navigate the Web Store at any time.

Installing apps from Chrome Web Store

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Web Store** (or type "Web Store" in the search bar).
3. You can then browse through the app categories in the left column or search for a specific type of app using the search box.
4. When you find an app that you would like to add, select it and then select **ADD TO CHROME**.
5. A verification window will pop up, select **Add** to download and install the app, or select **Cancel**.

To open your new app, select the **Launcher**, then **All Apps** (or type the name of your new app), and then select the app.

Installing apps from Google Play Store

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Play Store** (or type "Play Store" in the search bar).
3. You can browse apps by category or search for an app by keyword.
4. Select an app to view more information.
5. Select **INSTALL** to download apps.

Downloaded apps will be installed in the Launcher. If you cannot find the apps, select an app in the **All Apps** list.

Removing apps from Chrome OS

1. Select the **Launcher** icon.
2. In the **All Apps** list, select an app (or type the name of the desired app).
3. Two-finger tap on the app you want to remove.
4. Select **Uninstall**.



Note

Some apps such as the Chrome web browser cannot be uninstalled.

Pin an app to the shelf

1. Select the **Launcher** icon.
2. In the **All Apps** list, select an app (or type the name of the desired app).
3. Locate and two-finger tap the desired app icon.
4. Select **Pin to shelf**.

To reorder the apps on the shelf, just drag them around.

Unpin an app from the shelf

1. Locate and two-finger tap the desired app icon from the shelf.
2. Select **Unpin**.

Google Drive

All files saved to your *Google Drive* are saved online and are accessible to other devices, such as your smartphone or tablet. Files saved to the *Downloads* folder are saved to your local drive and are only accessible to your Chromebook Tab.



Note


You must be connected to the Internet to do the following Google Drive operations.

Difference between Drive and Files apps

Google Drive is a web-based storage service offered by Google, and the *Files* app is the onboard storage system for your Chromebook Tab. Because your Chromebook Tab makes heavy use of the web, you can easily access files both from *Google Drive* and those that are stored locally by using the *Files* app on your Chromebook Tab. To use the *Files* app, select the *Files* icon in the apps list, or use the keyboard shortcut <Alt> + <Shift> + <M>.

This user manual uses *Google Drive* and *Files* interchangeably when giving instructions regarding accessing files.

Creating a new document

1. From the Apps list, select the **Google Drive** icon (.
2. Select **NEW** and select the type of document you want to create.

 


Note


*For an alternative method of creating documents, see **How to create documents on page 21**.*

Sync files from Downloads to Google Drive


1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Files** (or type "Files" in the search bar).

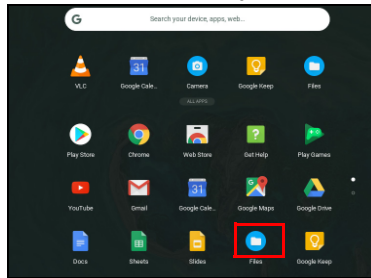

 3. Select the files that you want to upload.

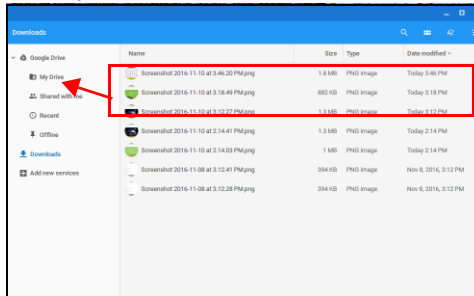

 4. Drag-and-drop the files to **My Drive**.

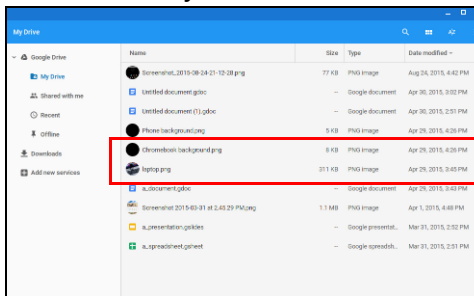

Enable offline access to Google Drive files

You can access files stored on your Google Drive while offline, but first you must enable offline access:

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Files** (or type "Files" in the search bar).

3. Select **My Drive**.
4. Select the file(s) you want to access offline.
5. Two-finger tap to bring up the context sensitive menu and select **Available offline**.

Gmail

Composing an email

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Gmail** (or type "Gmail" in the search bar).
3. Select **COMPOSE**.
4. Enter the recipient's email address, the subject, and the message.
5. When you are finished composing your message, select **Send**.

YouTube

YouTube is a video-sharing website on which users can upload, share and view videos. You can access it by doing the following:

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **YouTube** (or type "YouTube" in the search bar).

Playing video or audio files

Your Chromebook Tab has a built-in media player to play audio and video files. To play a file, double-click on an audio or video file in your *Files* app.

Media type	Supported formats
Audio / Video	.3gp, .avi, .mov, .mp4, .m4v, .m4a, .mp3, .mkv, .ogv, .ogm, .ogg, .oga, .webm, .wav

Other Supported File Types

Your Chromebook Tab supports a number of other file formats.




File type	Supported formats
Microsoft Office files	.doc, .docx, .xls, .xlsx, .ppt (read-only), .pptx (read-only)
Images	.bmp, .gif, .jpg, .jpeg, .png, .webp
Compressed	.zip, .rar
Other	.txt, .pdf (read-only)

CHROME OS TIPS AND TRICKS

Your Chromebook Tab is a new type of computer that works somewhat differently than what you may be used to, so you might like to know how easy and useful things are when using it. Here are some tips and tricks.

Documents

How to create documents

1. Select the **Launcher** icon.
2. In the search bar, type "Google Docs", "Google Sheets", or "Google Slides" depending on the type of document you want to create. Create word processing files with *Google Docs*, spreadsheets with *Google Sheets*, and presentations with *Google Slides*.
3. Select **Google Docs** , **Google Sheets** , or **Google Slides** .

That's it. You've just created a new document in a few seconds. With your new document, you can add text, insert images, change the font, make it bold, underline it, italicize it – you get the gist. Most of the formatting and other stuff you might be familiar with from other productivity suites like Microsoft Office you can do with Google Docs.



Note

For an alternative method of creating documents, see [Creating a new document on page 17](#).

Finding your documents

All documents you create are saved to your *Google Drive* where they are online and accessible to other devices, such as your smartphone or tablet. To find your documents, do the following:



1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Google Drive** (or type "Google Drive" in the search bar).

3. Select **My Drive** (or whatever sub-folder you've created to put your files in).

Since your files are saved in Google Drive, they are saved online and available anywhere you have internet access. To access your files from any internet-connected computer do the following:


1. Open the computer's web browser.
2. In the browser's address bar, type "drive.google.com" (this is the *Google Drive* web address).
3. Login using your Google account username and password.
4. Select **My Drive** (or whatever folder you've created to put your files in).

How to share documents with other users

1. Select **Share**  **Share** in the upper right corner of your document.
2. Add people by typing in their email address. The sharing option works with your Gmail contacts, so as you type your email contacts appear for you to quickly select.
3. After you select **Done** , they'll receive an email letting them know a document has been shared with them.

How to start a video chat

For Skype users, Google+ Hangouts are free video chats for up to ten people. To make a Hangouts video call, do the following:

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Hangouts call**  (or type "Hangouts" in the search bar).
3. Type in the name or email address of a person.
4. Select the **Invite** button to start your Hangouts.



How to listen to music

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Play Music**  (or type "Play Music" in the search bar).





Note

Play Music may not be available in all countries and regions. Google Play's current list of country availability for apps and digital content, visit <https://support.google.com/googleplay/answer/2843119?hl=en>

To listen to streaming music, you can download streaming apps like Pandora, Spotify, Rdio, Deezer and more (availability varies by country) from **Chrome™ Web Store**  or **Google Play Store** .



How to watch videos, TV, or movies

1. Select the **Launcher** icon.
2. In the **All Apps** list, select one of the following options:
 - a. Select **YouTube**  to view a vast amount of user-uploaded videos covering nearly everything imaginable.
 - b. Select **Play Movies**  to watch the movies and TV shows you love.




Note

Play Movies may not be available in all countries and regions. Google Play's current list of country availability for apps and digital content, visit <https://support.google.com/googleplay/answer/2843119?hl=en>

- c. To find more entertainment apps like Netflix, Flixster, and more (availability varies by country), select **Web Store**  or **Play Store** . Then, search for "Netflix" or other entertainment apps.


Working with Microsoft Office (Word, Excel, and Powerpoint) documents

Open and edit Microsoft Office files using Google's office compatibility mode

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Files**  (or type "Files" in the search bar).
3. Double-click on any **Microsoft Office** file stored in Google Drive or on an external hard drive or USB flash drive connected to your Chromebook Tab.

Google Chrome automatically opens and enables limited editing of the document.

Convert Microsoft Office files to Google Drive formats

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Files**  (or type "Files" in the search bar).
3. Double-click on any **Microsoft Office** file stored in Google Drive or on an external hard drive or USB flash drive connected to your Chromebook Tab.
4. Select **File > Save as Google Docs, Slides, or Sheets** (format depends on the type of document).

Export Google Drive documents as Microsoft Office files

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Docs** (or type "Docs" in the search bar).
3. Select **Google Docs, Sheets, or Slides** (depending on the document you want to create).
4. After creating the content of your document, select **File > Download as** and select the type of format you want to save as.
5. The file is saved to the *download* section of the *Files* app.

Opening Microsoft Office files using Microsoft's Office Online apps from the Chrome Web Store or Google Play Store

Another option for working with Microsoft Office files is to use Microsoft's own free web-based Office Online tools. You can download the Word Online, Excel Online, and PowerPoint Online apps from the Chrome Web Store or Google Play Store (you'll need to create a Microsoft account if you don't already have one). Then, you can login and create files or upload files you have already created and edit them.



Note

*Office Online programs save files you create exclusively to Microsoft's own OneDrive cloud storage. Though you can download a file you create and then move it to Google Drive or a removable storage device, you cannot save it directly to those locations. Also, to work on a file you've already created, you must first upload it to OneDrive by selecting **Open from OneDrive** from within whichever Office Online product you are using (you can install the OneDrive app from the Web Store as well).*

How to use your Chromebook Tab when there's no internet


The **Chrome Web Store** contains useful offline apps ([see Installing apps from Chrome Web Store on page 15](#)). You're able to filter your app search by selecting the **Runs Offline** checkbox. For those times you don't have an internet connection, these apps help you stay productive and entertained. A few of the pre-installed options are described below.

Gmail Offline



Note

*The first time you use Gmail Offline you **MUST** be connected to the internet to enable offline viewing.*



1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Gmail Offline**  (or type "Gmail Offline" in the search bar).
3. Use the app like you normally would. It'll update and send your emails the next time you log on to the internet.

Google Drive



Important

Any changes you make to a current document or any document you create while offline are saved locally on your computer and will not be seen if you open the document from Google Drive on another computer or device. The changes will only be reflected in the Google Drive online version of the document the next time you connect to the internet and access Google Drive.

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Google Drive**  (or type "Google Drive" in the search bar).
3. Open a Google document you have already created or create one as you normally would (**see [Creating a new document on page 17](#)**). Notice the **offline**  icon displays next to the file name reminding you that you are working on this document while not connected to the internet.

4. Make your desired changes. The next time you are online and have Google Drive open, your local changes will upload to Google Drive.




Note

 
If you make changes to a Google document while offline and someone else makes changes to the document as well (for example, if the document is shared with someone else), the next time you are online and have Google Drive open, your changes will merge with the other person's changes.

You can't open and access every type of file you have saved in Google Drive when there is no internet connection. To enable offline access to file types other than Google documents when offline, **see [Enable offline access to Google Drive files on page 18](#)**.

SETTINGS

Use the Settings menu to adjust the various options for your Chromebook Tab. To access the Settings menu do the following:

1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select **Settings**  icon.

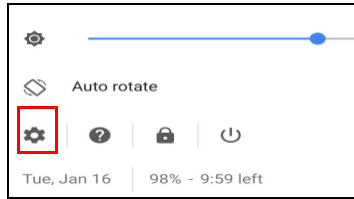


3. To show the advanced settings, scroll to the bottom and select **Advanced**.



Note

Using default settings, the Chromebook Tab will enter hibernate mode after one hour.


Changing the language settings

1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select **Settings**  icon.
3. Select **Advanced**.
4. Scroll down and select **Language** in the *Languages and input* section.
5. Select **Add languages** to add additional languages.
6. To enable a language for keyboard input, under *Input Method* select the checkbox next to your desired input method.
7. Select **ADD** when finished.

Changing the clock settings


You can change the time format and time zone on your Chromebook Tab. If the date or time is incorrect on your Chromebook Tab, try adjusting the time zone.

To change the time zone:

1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select **Settings**  icon.
3. Select **Advanced**.
4. In the Date and time section, select the desired time zone from the the drop down box.


Customizing appearance

Customizing the wallpaper

1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select **Settings**  icon.
3. In the *Appearance* section, select **Wallpaper**.
4. Select a preloaded wallpaper or select **Custom**, plus sign, and then **Choose File** to select your own image.
5. Once selected, select **OPEN**.

You can also choose **Surprise Me** to have the wallpaper change randomly.

Customizing the theme


1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select **Settings**  icon.
3. In the *Appearance* section, select **Browser themes**.
4. You'll be taken to the *Chrome Web Store*, where you can find extra resources for the Chrome browser.

5. Once you find a theme that you'd like to try out, select it and then select **ADD TO CHROME**.

Setting up a printer


You can use the *Google Cloud Print* service to send print requests to many types of traditional cabled printer and wireless "cloud ready" printers; however, not all printers are supported.

To learn more about *Google Cloud Print* and how to set up your printer, reference Google's own Chromebook Help to find comprehensive information on this topic. To access Chromebook Help, do the following:

1. Select the **Launcher** icon.
2. In the **All Apps** list select **Get Help**  (or type "Get Help" in the search bar).
3. Select **Printing**.

Updating Chrome OS


Automatic update

Each time you turn on your Chromebook Tab, it automatically checks for updates. When an update is available, this update icon  will appear in the status area. To apply the update:

1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select **Restart to update**.
3. Your Chromebook Tab will shutdown and automatically restart, with the update applied.

Manual update

To manually check for an update or check what version of Chrome OS you are using:

1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select **Settings**  icon.

3. Select **About Chrome OS** from settings at the top left corner.
4. In the dialog that opens, select **Check for updates**. If any updates are available, they will be displayed on the page.



Important

Do not modify your Chromebook Tab's hardware yourself. Doing so will cause the update function to no longer work. Please get in touch with your dealer or an authorized service center. Visit www.acer.com to find an authorized service site.


Resetting your Chromebook Tab

There may be times when you want to reset your Chromebook Tab (for example, removing your personal information and settings). Completely resetting your Chromebook Tab is known as "Powerwashing", which is basically factory resetting your computer. After powerwashing, your Chromebook Tab will look like it did out of the box (including all apps that came pre-installed). To powerwash your Chromebook Tab, do the following:



Important

 
Powerwashing your Chromebook Tab will remove all local settings, data, and programs from your hard drive. Backup any data on your hard drive that is not saved online by moving it to Google Drive and waiting for it to sync.

1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select **Settings**  icon.
3. Select **Advanced**.
4. In the *Reset* section, select **Powerwash**.
5. Select **RESTART**.

HELP

Online and offline help

Additional help is available both online and offline. *Chromebook Help* is installed on your Chromebook Tab and doesn't require internet access. It covers basic troubleshooting as well as more detailed information about Chrome OS and using your Chromebook Tab.

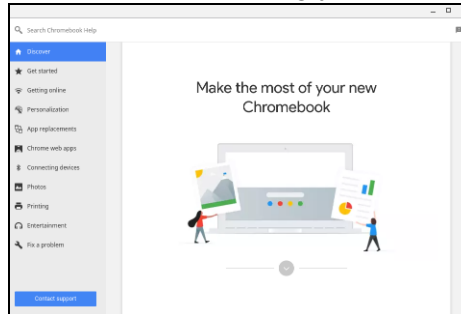


Note

Some sections in Chromebook Help have web links, which require you to have internet access to view the additional information.

To access *Chromebook Help*, do the following:

1. Select the **Launcher** icon.
2. In the **All Apps** list, select **Get Help**  (or type "Get Help" in the search bar).

 Alternatively, you can access *Help* by doing the following:

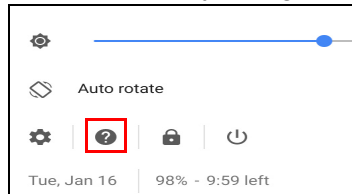

1. Select the **Status** area of the shelf in the lower-right corner of the screen (where your account picture appears).
2. Select the question mark **"?"**.